

X-Banner B4

Part#: XBAN-B4

Banner Dimensions:


18" to 40" wide
59" to 72" tall
Grommets in the corners



Adjustable
Top Hook



Telescoping
Arms & Legs

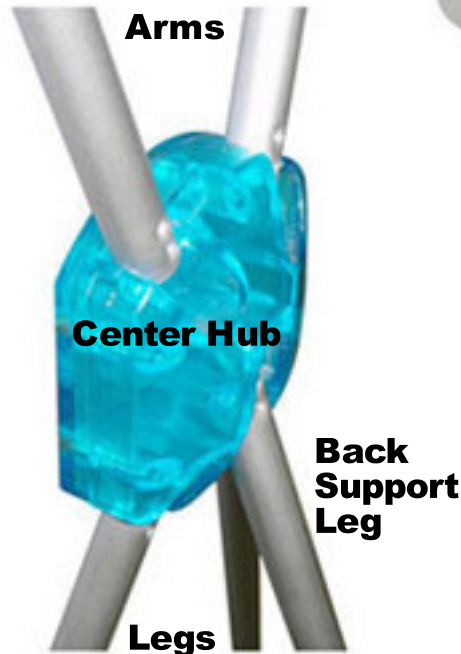


Arms

Center Hub

Back
Support
Leg

Legs

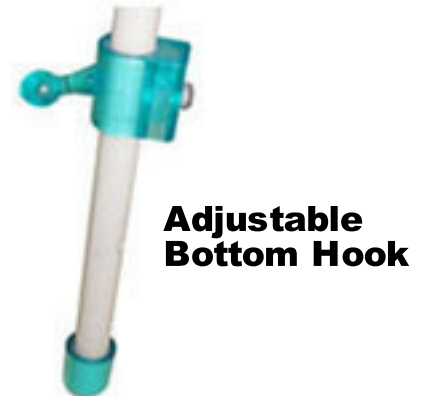

Adjustable
Bottom Hook

1. Swivel out the ARMS, LEGS, and BACK SUPPORT LEG from the CENTER HUB as shown. Telescope all 5 poles to a size larger than the banner.
2. Place the 2 top grommets of your banner on the ADJUSTABLE TOP HOOKS. The banner should hang a little bit above the ADJUSTABLE BOTTOM HOOKS. If not, telescope the arms and legs until it does.
3. Pull the bottom of the banner down, and place the bottom grommets on the ADJUSTABLE BOTTOM HOOKS, bending the ARMS and LEGS and lightly tensioning the banner.